



*Custom*

STAMP & ENGRAVING LTD.

info@rstamp.com • www.rstamp.com

163 LANGFORD ST. VICTORIA, B.C. V9A 3B8


PH: 250-383-6171 1-800-667-8779

FX: 250-383-1315 1-800-240-1315

## How to change the die on your Printy 4.0



The ink pad can be seen at the back of the stamp.

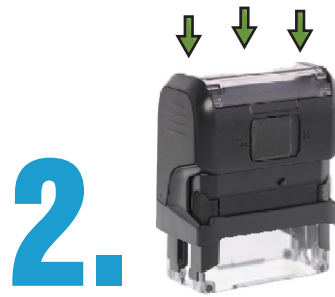

Push the top of stamp just enough so the pad clears the bar.



Holding this position, grip the corners of the pad and slide it out.

**4.**

Once the pad is removed, stamp several times on some scrap paper. Remove as much ink as possible this way before moving onto step 5.



Press the stamp down almost to the bottom. Slide the switch at the back to lock the stamp into position.



Turn the Stamp upside down and remove the die. Make sure to clear away all excess tape.

**7.**



Make sure that the front of the stamp is facing you. Peel and stick the new die onto the die plate.

**8.**

When applying the new die, try to centre it as best you can on the die plate. Once in place, unlock the stamp and reinsert the pad the same way you removed it. It may take a few stamps before the information stamps clearly. If it continues to have gaps in the impression you will need a new ink pad.

**You're Done! Enjoy your new stamp!**