



Custom

STAMP & ENGRAVING LTD.

info@rstamp.com • www.rstamp.com

163 LANGFORD ST. VICTORIA, B.C. V9A 3B8

PH: 250-383-6171 1-800-667-8779


FX: 250-383-1315 1-800-240-1315


How To:


Replace the Die on Your Self-Inking Stamp:




The First thing to do is take out the Ink Pad:

- 

1. The ink pad can be seen at the back of the stamp.
- 

2. Push and hold top of stamp so that it stops just above the pad.
- 

3. Still holding down the top push the button on the front.
- 

4. Pull out the ink pad.

Make sure to stamp many times after pad is removed to dab off excess ink!

Now Replace the Die:

- 

1. Push the Stamp down all the way and press the buttons on the side to lock die plate in place.
- 

2. Turn the Stamp upside down and remove the die. Make sure to clear away all excess tape.
- 

3. Make sure that the front of the stamp is facing you. Peel and stick the new die onto the die plate.

Once the new die is in place unlock the stamp by pushing on the bottom. Install a new ink pad remembering to push the top of the stamp down, just like when you removed the old pad. This prevents the pad from contacting the die during installation. Gently push the pad in as far as you can until you feel a slight snap.

You're Done! Enjoy your new stamp!